



Installation Instructions

Luminaire Code(s) – **ALWLLED/ & ALWLLED/PIR/**

General Installation Instructions

These instructions should be read carefully prior to any installation and retained after completion for further reference and maintenance. Please give these instructions to the building owner/occupier after installation.

Important Safety

1. Before installation, maintenance or lamp replacement, ensure that the mains supply to the luminaire is switched off and the circuit supply fuses are removed or the circuit breaker is turned off.
2. It is recommended that only a qualified electrical contractor carries out the installation of this luminaire and that the luminaire is installed in compliance with the current edition of the IEE Wiring Regulations.
3. The person carrying out the installation is to check and verify that the total load on the circuit, including that of this luminaire does not exceed the rating of the circuit cable, fuse or circuit breaker.
4. Where a luminaire incorporates discharge control gear (inductive load), the circuit capacity and ratings require careful sizing to avoid nuisance tripping of the protective device used in the installation.
5. Where applicable, careful consideration should be taken during installation to ensure that all fixings and/or suspensions are of a suitable size for the luminaire being installed.

Ratings

1. All luminaires are manufactured & tested in compliance with the requirement contained within BS EN 60598 and are CE marked.
2. All luminaires that are of Class 1 construction and that are marked accordingly, MUST be earthed.
3. All luminaires are designed to operate at 230Volts AC -6%/+10% = 216Volts to 252Volts. Do not operate outside these voltages.
4. All luminaires are only suitable for applications within their rated Ingress Protection limits as stated.

Exclusions to Warranty

Please Note - The limited warranty shall be null and void in the following circumstances:-

Failure by the installer, end user or any third party to exercise caution to protect any covered product or part from outside damage, adverse temperature (normal operating ambient temperature -20 - 50°C), humidity conditions, fluctuations in the electrical system or physical abuse as well as failure related to workmanship in the installation of the products or parts.

Installation

- This luminaire has two mounting options – Top Arm or Bottom Arm. **Please Note – PIR versions MUST be installed with a bottom arm orientation only.**
- Remove the two hexagon screws on the front of the main housing of the luminaire.
- Lift and remove the front cover, Select a suitable cable entry point.
- Position and fix the base to a suitable solid surface. Ensuring the orientation is correct for your top / bottom arm selection.
- Terminate the supply cable into the terminal block mounted in the base, ensuring correct polarity is observed and the luminaire has an earth provision.
- Re-fit the front cover of the housing and replace the two hexagon screws.
- Twist and lock the diffuser assembly by aligning the keys around the lampholder and slots of the diffuser assembly and twist clockwise until locked into position.
- Twist and lock the single end cap into the un-occupied hole, twisting clockwise to lock into position.
- Restore power supply, switch on and test for satisfactory operation.
- **Note** - It is the responsibility of the Installer to ensure the cable connection meets the requirements of IP65. A compression gland rated to IP65 or greater is recommended, however where IP65 is not needed a grommet is provided which can be protected further by the addition of a suitable silicon sealant.

PIR Version /PIR

It is recommended that the installing engineer makes any adjustments during initial installation.

Functions / Dial Settings

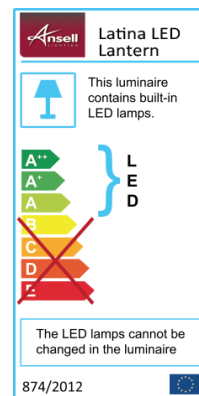
Sens- 8M

Time- 5 seconds to 5 minutes

Lux- 3 Lux - Photocell Off

Override Facility

Install a switch onto the incoming live supply to the luminaire. Switch the fixture off then on twice in 3 seconds to manually over-ride the fixture. The override facility will reset after 8 hours continuous operation. To remove the over-ride feature turn the switched live off for 10 seconds and turn back on.

IP65 

Maintenance:

1. This luminaire contains no serviceable parts.



Disposal of Electronic Equipment WEEE Directive 2002/96/EC

This product falls within the scope of the Waste Electrical & Electronic Equipment Directive (WEEE), which means the product should not be disposed of as normal household waste. Ensure that this luminaire and lamp is disposed of in accordance with the WEEE Directive. Contact a local Council Waste Dept. Local Amenity Site, or the Environment Agency for further information. **RoHS** - All components and materials used in this product are **RoHS** 2002/95/EC compliant.



Blue / Black



Brown / Red